


HOLTE URE UNDERREAMER DRIVE SHOE STYLE

**Maximize your underreaming with a
Holte URE**

**Designed to have a wider cutting edge where
you need it most. The Holte oval shape places
more cutting edge on the bore hole wall.**



Notch that retracts
the bit

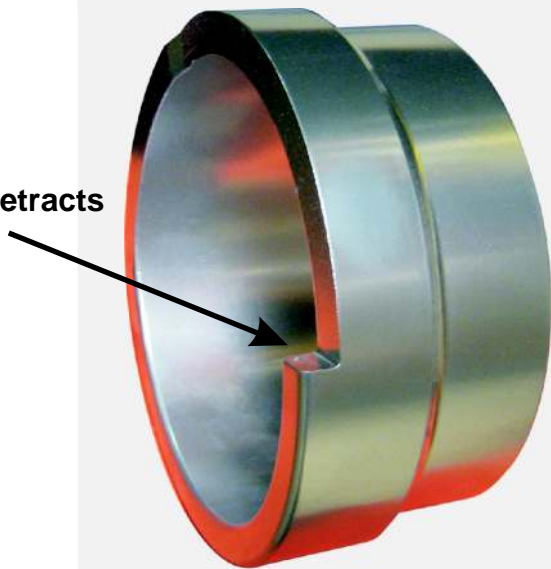

**Internal drive shoe style
Machined and heat treated
Drive Shoe.**



Maximum Gauge
Surface Contact

**HOLTE
MANUFACTURING**

541-343-3399

Visit us at drilling.com

HOLTE URE UNDERREAMER

CASING DRIVER STYLE



**Maximize your underreaming with a
Holte URE**

**Designed to have a wider cutting edge where
you need it most. The Holte oval shape places
more cutting edge on the bore hole wall.**



Maximum Gauge
Surface Contact



The percussion underreamer along with a small compact **Holte Casing Driver Model 140**, which also serves as a diverter, will allow the casing to be placed easily.

HOLTE
MANUFACTURING

541-343-3399

Visit us at drilling.com